



Blue Tester method of use coming in a kit consisting of 2 bottles.

1. 1 bottle 10ml named DURATION BLUE TESTER
2. 1 bottle 20ml named REMOVING BLUE TESTER

DURATION BLUE TESTER

By this tester you can see if the coating still working or not. The Blue tester was developed for industrial product level and is visible mainly on matt surfaces. It cannot be seen properly on glass or shine surfaces like stainless steel. We do not sell the blue tester as "guaranteed" detection of the coating.



1X10ml
1x20ml

HOW TO USE

1. Drop a drop of the blue tester on a coated surface.
2. Using a clean cloth wipe the drop and see the color on the surface. Following the colors as bellow you can see if the coating is OK or you need to recoat.

REMOVING BLUE TESTER

Remover blue tester of use

To remove the Blue tester from the tested surface, spray the surface with the **REMOVING BLUE TESTER** and wipe until the blue color is removed.

CAUTION the **REMOVING BLUE TESTER** also removes and the antibacterial protection from the surface, so after performing the test, you must repeat the antibacterial protection procedure by using the **NANO4-CLEAN&PRIMER** and **NANO4-HYGIENE LIFE** following the application instructions.

Over-treated Slightly over-treated Good treatment Slightly under-treated Under-treated